




Multiuser mode

1

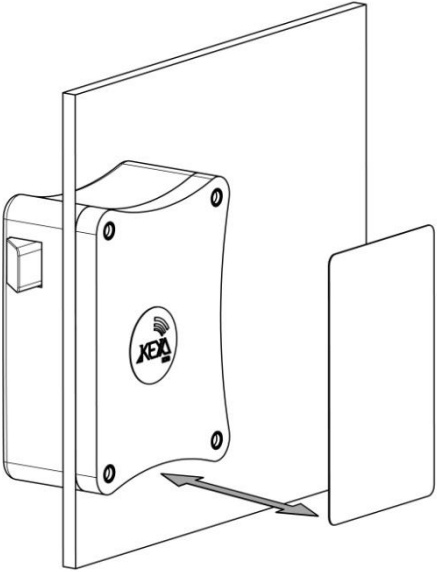


To open and close:

Approach the user card.

Access by transponder. The transponder code is erased every time the lock is opened, being available for a new user.

Single User mode

2

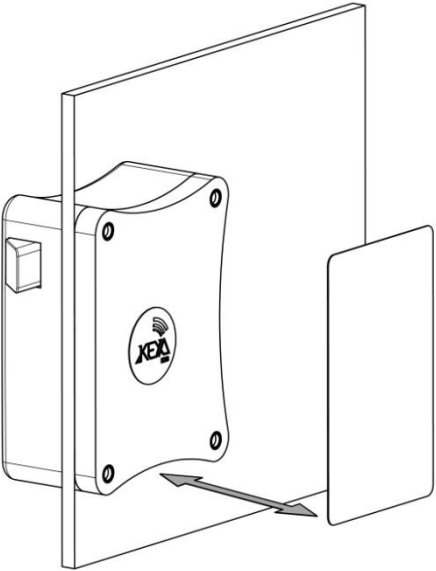

To open:


Approach the user card.

To close:

Automatically after 2 seconds.

Access by transponder. The transponder code is fixed.


Create and delete User cards (only for single user mode)

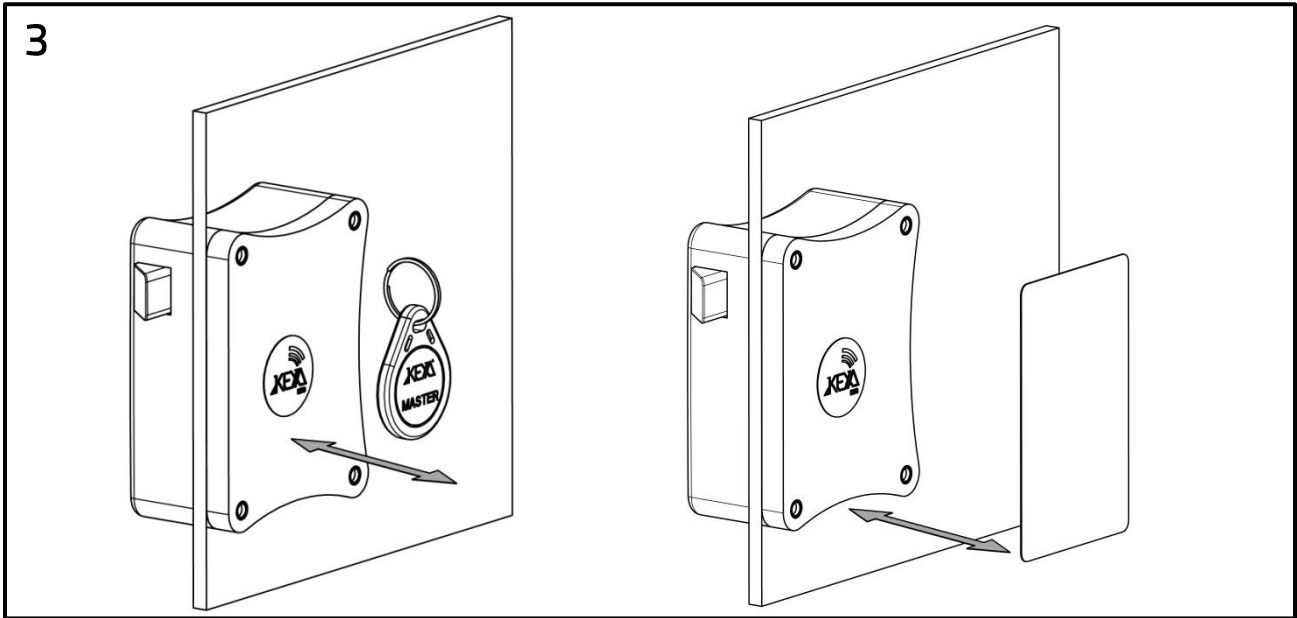

CREATE:
Approach the Master key followed by the new User cards.
Up to 50 User cards can be created per lock.


DELETE:
Approach the Master key followed by the User card.
User card deleted.

Master code

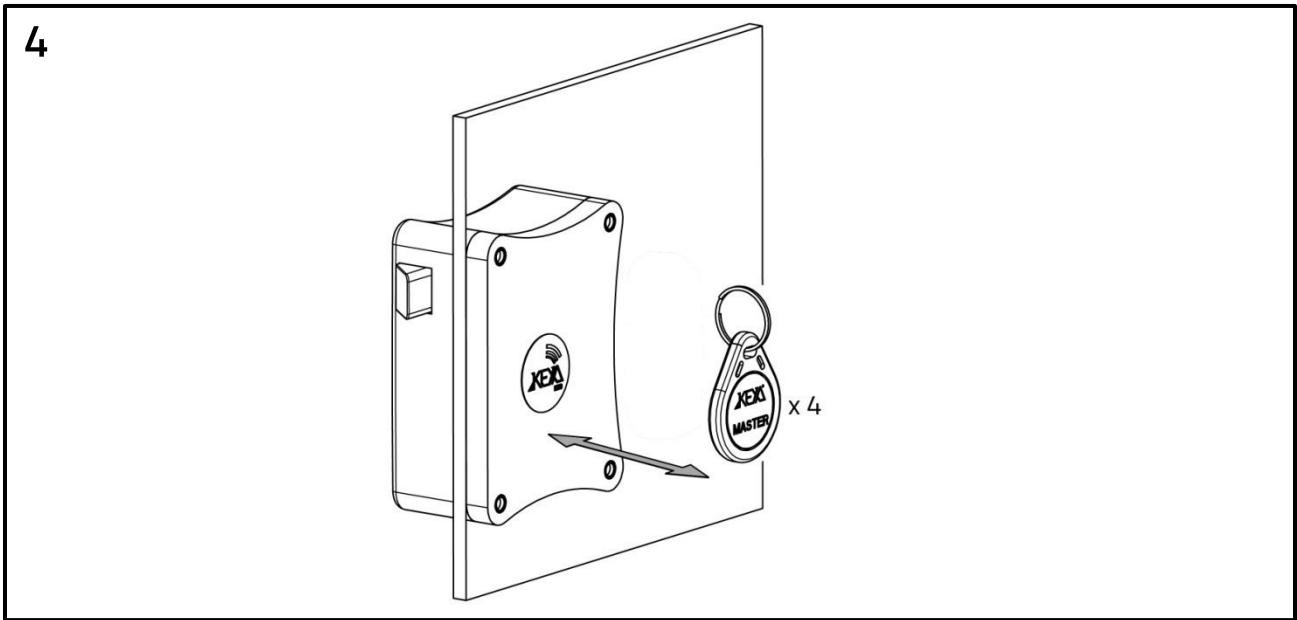

OPEN:
Approach the Master key 4 times.


Inspection code

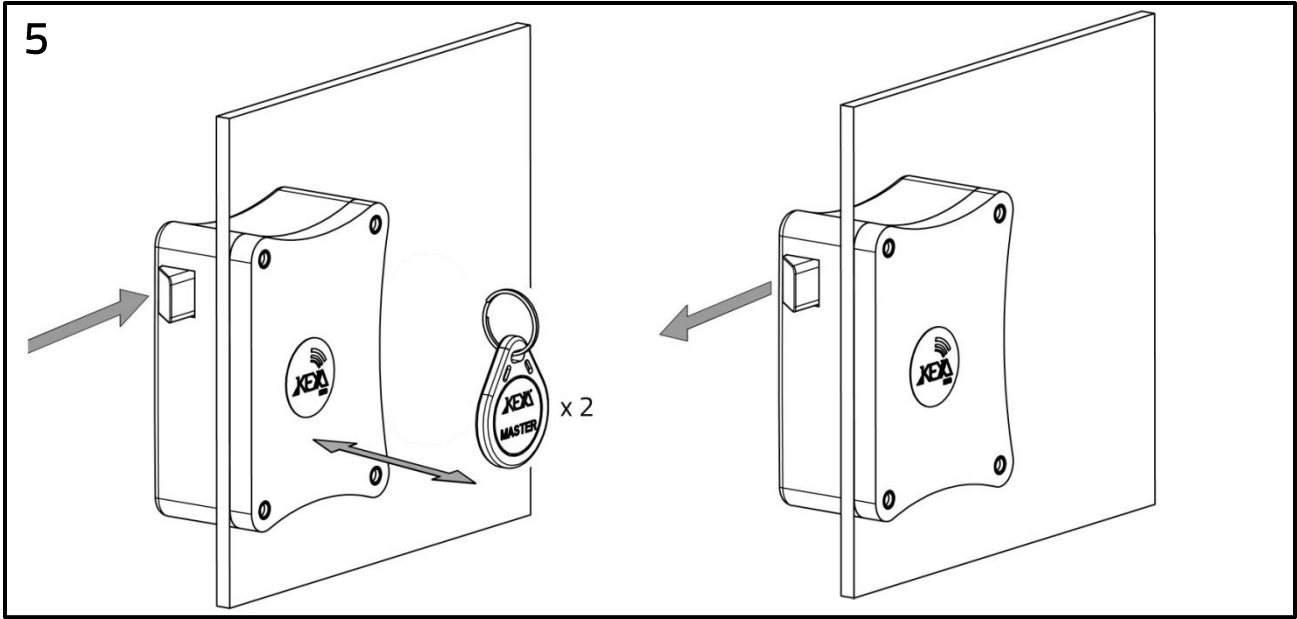


OPEN
Approach the Master key 2 times.

CLOSE
Automatically after 2 seconds.

Battery replacement

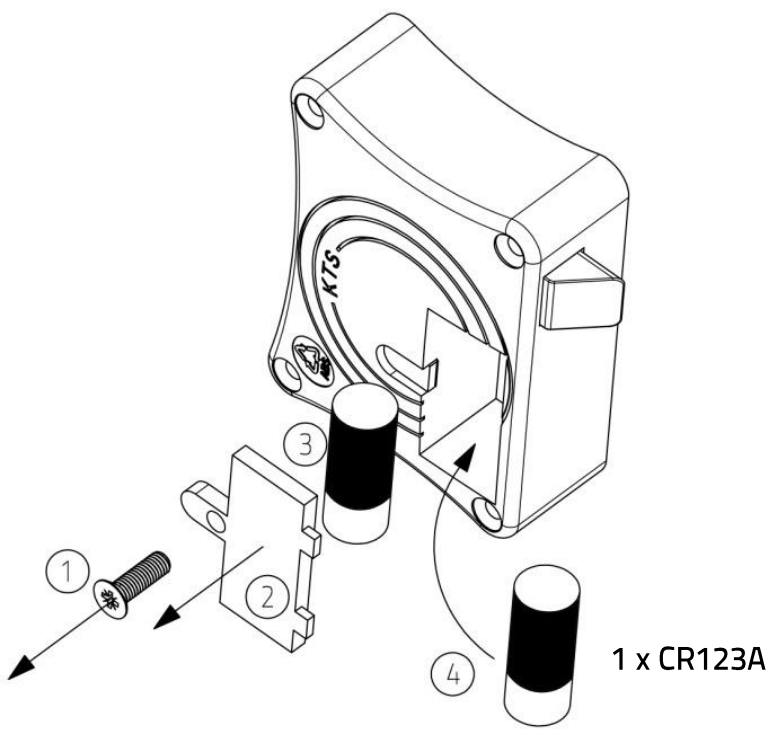

Measurements

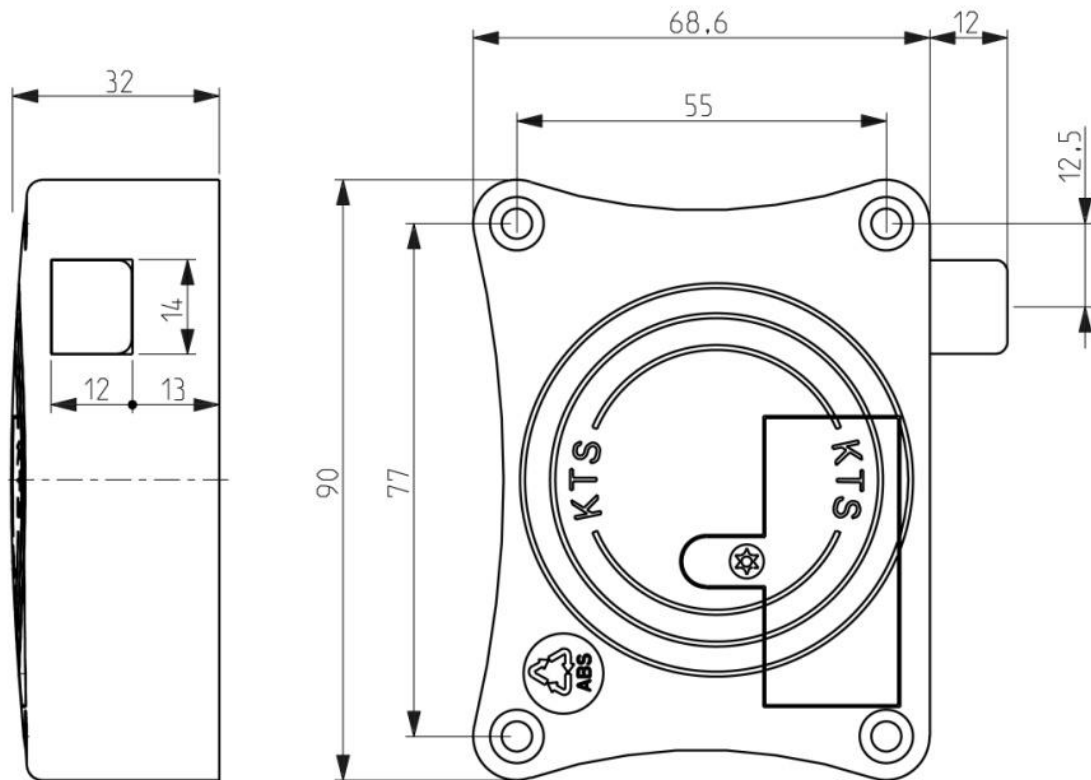

Technical information

RFID technology: Temic 125kHz

RFID card: ATMEL T5557 / 5567, ISO / IEC 7816

Battery: Litio CR123A

Battery life: 20.000 cycles

Nota: lock for indoor use.



RoHS

